

# KitchenAid®

## TOASTERS INSTRUCTIONS



KTT570

KTT460

KTT340



1-800-541-6390  
Details Inside



FOR THE WAY IT'S MADE.®

# Hassle-Free Replacement Warranty

---



We're so confident the quality of our products meets the exacting standards of KitchenAid that, if your toaster should fail within the first year of ownership, KitchenAid will arrange to deliver an identical or comparable replacement to your door free of charge and arrange to have your "failed" toaster returned to us. Your replacement unit is covered by our one year full warranty. Please follow these instructions to receive this quality service.

**If you reside in the United States** and your KitchenAid® toaster should fail within the first year of ownership, simply call our toll-free Customer Satisfaction Center at **1-800-541-6390**. Give the consultant your complete shipping address. (No P.O. Box Numbers, please.)

KitchenAid will arrange to deliver a replacement toaster and have your "failed" toaster returned to us.

When you receive your replacement toaster, use the carton and packaging materials to pack-up your "failed" toaster. Include a sheet of paper with your name and address on it, and a copy of the proof of purchase (register receipt, credit card receipt, etc.).

## Product Registration Card

---

Before you use your toaster, please fill out and mail your product registration card packed with the unit. This card will enable us to contact you in the unlikely event of a product safety notification and assist us in complying with the provisions of the Consumer Product Safety Act. THIS CARD DOES NOT VERIFY YOUR WARRANTY.

KEEP A COPY OF THE SALES RECEIPT SHOWING THE DATE OF PURCHASE OF YOUR TOASTER. PROOF OF PURCHASE WILL ASSURE YOU OF IN-WARRANTY SERVICE.

Please complete the following for your personal records:

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Date Purchased \_\_\_\_\_

Store Name \_\_\_\_\_

# Table of Contents

---

Hassle-Free Replacement Warranty.....	Inside Front Cover
Product Registration Card .....	Inside Front Cover
Important Safeguards.....	2
KitchenAid® Toaster Warranty.....	3
How To Arrange For Service – USA Only .....	3
Standard First Year Warranty.....	4
How To Arrange For Service – Outside The USA .....	4
If You Need Service or Assistance .....	4
Electrical Requirements .....	5
Illustrated Features of KitchenAid® Toaster Models KTT460, KTT570 .....	6
Using Your KitchenAid® Toaster Models KTT460, KTT570 .....	8
Illustrated Features of KitchenAid® Toaster Model KTT340 .....	12
Using Your KitchenAid® Toaster Model KTT340 .....	14
Cleaning Your Toaster .....	16
Recipes & Ideas.....	17

## **Your safety and the safety of others are very important.**

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:



**You can be killed or seriously injured if you don't immediately follow instructions.**



**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

# **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug toaster from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, turn any control to "OFF," then remove plug from outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls and the like, when in operation.
15. Do not attempt to dislodge food when toaster is plugged in.
16. This product is designed for household use only.

## **SAVE THESE INSTRUCTIONS**

# KitchenAid® Toaster Warranty - USA Only

This warranty extends to the purchaser and any succeeding owner for toasters operated in the 50 United States and the District of Columbia. [ For units operated in Puerto Rico, the Standard First Year Warranty applies (see page 4). The Standard First Year Warranty is a Limited Warranty because you must pay to ship the toaster to an Authorized KitchenAid Service Center. ]

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will not pay for
One Year Full Warranty from date of purchase.	 <p>Hassle-Free Replacement. (Available only for toasters operated in the United States and the District of Columbia. See inside front cover for details.)  <b>Or</b>, at your discretion – The replacement parts and repair labor costs to correct defects in materials and workmanship. Service must be provided by an Authorized KitchenAid Service Center.</p>	<p>A. Repairs when toaster is used in other than normal home use.            B. Damage resulting from accident, alteration, misuse or abuse.            C. Any shipping or handling costs to deliver your toaster to a Service Center.            D. Replacement parts or repair labor costs for toaster operated outside United States.</p>

**KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

## How To Arrange For Service — USA Only

If you live in the United States, you may use either the Hassle-Free Replacement Warranty program (see inside front cover) or our Standard First Year Warranty program (see next page). Residents of Puerto Rico **must** use the Standard First Year Warranty program.

*You may also use the information listed under Standard First Year Warranty to arrange for service after your warranty expires.*

# Standard First Year Warranty

---

## (Required Warranty Service for Puerto Rico)

Please bring the toaster, or ship it prepaid and insured, to the nearest Authorized Service Center. Call toll-free **1-800-541-6390** to learn the location of a Service Center near you. Your repaired toaster will be returned to you prepaid and insured.

All local service should be handled by an Authorized KitchenAid Service Center. If you are unable to obtain satisfactory service in this manner, contact the Customer Satisfaction Center, KitchenAid Portable Appliances, P. O. Box 218, St. Joseph, Michigan 49085-0218. Call toll-free: **1-800-541-6390**.

## How To Arrange For Service - Outside The USA

---

To arrange for service, consult your local KitchenAid dealer or the store where you purchased the toaster for information on how to obtain service locally.

## If You Need Service or Assistance

---

KEEP A COPY OF THE SALES RECEIPT SHOWING THE DATE OF PURCHASE. PROOF OF PURCHASE WILL ASSURE YOU OF IN-WARRANTY SERVICE.

**If your toaster should malfunction or fail to operate, please read the following:**

- If the digital display is not visible on models KTT460 or KTT570, turn the Shade Control or press one of the function buttons. The digital display is designed to automatically turn off to conserve energy.
- Check to see if the toaster is plugged in; if it is, unplug the toaster, then plug it back in again.
- Check the electrical circuit the toaster is connected to. Is a fuse

blown, or a circuit-breaker tripped in your home?

- Make certain the Easy Lift™ toaster lever is fully raised before you place bread into the slots.
- If the digital display on models KTT460 or KTT570 blinks "0", the toaster is too hot and will not operate. When the toaster cools to a safe temperature, the display will return to normal.

If the problem cannot be corrected with the above steps, see the "Warranty" on page 3. DO NOT return the toaster to the retailer – they do not provide service.

# Electrical Requirements

---

Volts: 120 A.C. only.  
Hertz: 60

 
Note: This toaster has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

 <b>WARNING</b>	
	<p><b>Fire Hazard</b></p> <p><b>Do not use an extension cord.</b></p> <p><b>Doing so can result in death or fire.</b></p>

# Toaster Features Models KTT460 and KTT570

---

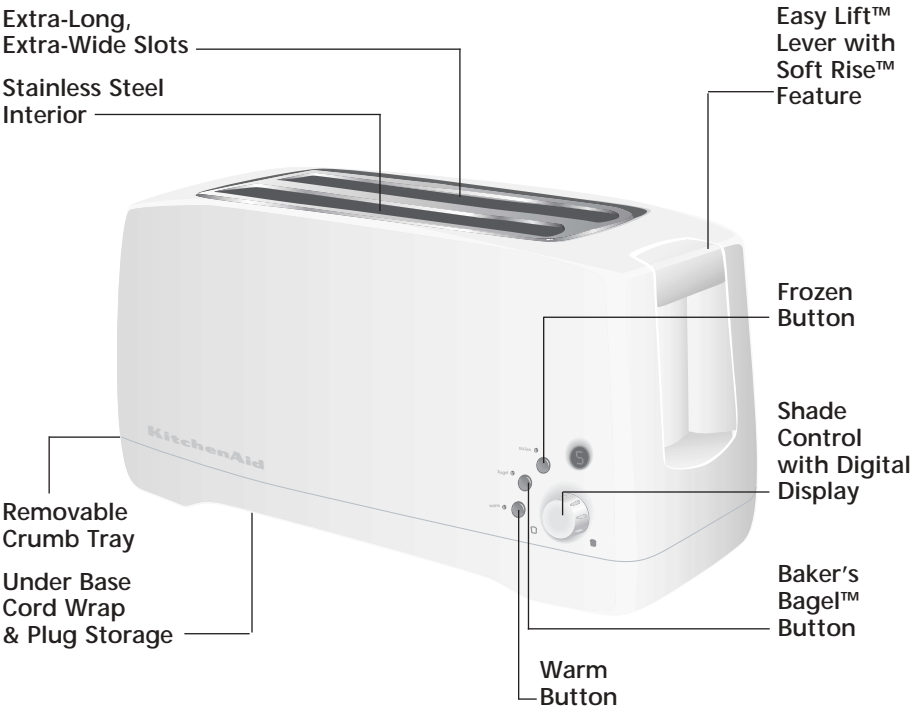



# Toaster Features Models KTT460 and KTT570

---

## **Even Heat™ System**

Heavy gauge heating elements mounted on extra-thick mica boards ensure even browning. A microprocessor coupled to a heat sensor optimally located in the toasting cavity ensures consistent toasting slice after slice.

## **Easy Lift™ Lever**

Cancel toasting with just a touch of the lever.

## **Soft Rise™ Feature**

Lifts fragile breads and toaster pastries gently.

## **Extra-Long, Extra-Wide Slots**

Handles bagels, English muffins, and thick breads easily.

## **Self-Centering Bread Racks**

Centers thick or thin breads perfectly for even toasting.

## **Removable Crumb Tray**

Full-width, rugged stainless-steel tray is dishwasher-safe.

## **Under Base Cord Wrap & Plug Storage**

Keeps extra cord out of sight and out of the way.

## **Shade Control with Digital Display**

The rotary Shade Control has a positive feel. The digital display shows exactly what shade you've selected.

## **Polycarbonate Housing**

Is durable and remains cool to the touch. The smooth, rounded surfaces are easy to clean.

## **Stainless Steel Interior**

The ultimate in durability. Extra-deep toasting cavity helps ensure even browning.

## **Sleep Mode**

After 30 seconds, digital display turns off automatically to conserve energy when toaster is not in use. Turn the Shade Control, touch a function button, or lower the Easy Lift™ lever to wake up the toaster.

## **Shade Memory**

The toaster remembers the last shade selected, even when unplugged.

## **Overtemp and Jam Protection**

Toaster will automatically shut down if the lift mechanism is jammed or internal temperature exceeds a maximum.

## **SPECIAL TOASTING FUNCTIONS**

### **Baker's Bagel™ Button**

Exclusive process varies the power level to each side of a bagel or English muffin, for perfect results!

### **Frozen Button**

Thaws and toasts frozen waffles, pastries, and bread.

### **Warm Button**

Warms – but doesn't darken – previously toasted foods.

### **Function Lights**

Indicate what special functions are selected.

# Using Your KitchenAid® Toaster

## MODELS KTT460 and KTT570

Before using your toaster, check the Extra-Wide, Extra-Long Slots and remove any packing or printed material that may have fallen inside during shipping or handling. Do not probe inside the toaster with a metal object.

You may see light smoke the first time you use the toaster. This is normal. The smoke is harmless and will soon disappear.

### TO USE:



**KTT570**



**KTT460**

1. Shorten cord, if necessary, by wrapping cord under the base.
2. Plug toaster cord into electrical outlet. Digital display will default to a shade level of 5.  
Sleep Mode: If the toaster isn't used for 30 seconds, it will cycle into "sleep mode" and the digital display will shut off to conserve energy. Turning the Shade Control, pressing a function button, or lowering the Easy Lift™ lever will instantly wake-up the toaster. When the toaster is in "sleep mode", turning the Shade Control a single "click" or detent will wake-up the toaster, but not alter the previously set shade level.



3. Insert bread or other food to be toasted into slot.



4. Turn the Shade Control to select the degree of darkness you want. The digital display will show the selected shade level. Turn the Shade Control clockwise for darker toast, counterclockwise for lighter. Shade settings 1-3 are light, 4-6 are medium, and 7-9 are dark.

Note: Different types of bread and their moisture levels may require different shade settings. For example, dry bread will brown more rapidly than moist bread and will require a lighter setting. For even toasting, toast only one bread type and thickness at a time. If toasting one slice of bread, place bread in the center of a long slot, and turn the Shade Control to a lower setting.

 
# Using Your KitchenAid® Toaster

---

MODELS KTT460 and KTT570



5. Push the Easy Lift™ lever down until it locks in place. The centering racks will adjust slot width automatically to hold food upright for even toasting. When toasting is completed, the toaster will shut off and the Soft Rise™ system will gently raise the toast for removal.

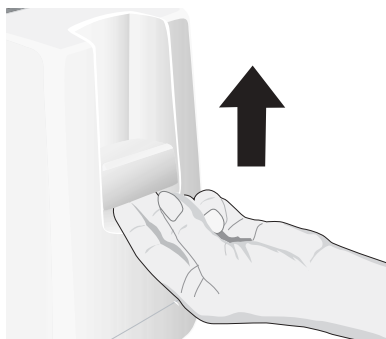



To cancel toasting anytime, lift gently on the Easy Lift™ lever. The toaster will shut off and the Soft Rise™ system will gently raise the toast for removal.

# Special Toasting Functions

  You can select – or cancel – any of the special toasting functions by pressing the appropriate button either before or after you lower the Easy Lift™ lever to begin toasting. The function lights will indicate which functions are selected. After a toasting cycle is complete, all functions will be cleared.

## Baker's Bagel™ Toasting

Selecting the Bagel Button will toast the thickest bagels and English muffins evenly, gently browning the bottoms while toasting the sides that are sliced. An exclusive KitchenAid™ process, Baker's Bagel™ Toasting produces perfect results by reducing power to the heating elements on one side of the toasting cavity by 50%.

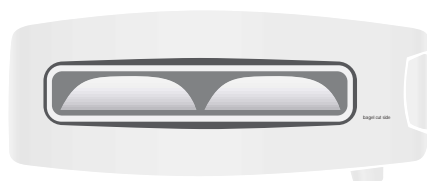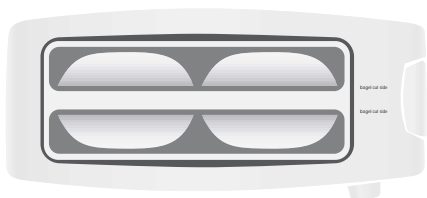

1. If your toaster has 2 slots (Model KTT570), insert the bagel so that the flat (sliced) side of the bagel faces the center of the toaster. If your toaster has a single slot (Model KTT460), insert the bagel so that the flat (sliced) side of the bagel faces toward the front of the toaster, where the Shade Control and digital display are located.

2. Set the Shade Control to the level you want. English muffins will generally take more time to toast than bagels.



3. Press the Bagel Button, then push the Easy Lift™ lever down until it locks. You can also press the Bagel Button *after* pushing down the Easy Lift™ lever.




To thaw and toast frozen bagels: press both the Bagel and Frozen Buttons.

# Special Toasting Functions
 
## Toasting Frozen Items

Your KitchenAid® Toaster will thaw and toast frozen breads, waffles, or pastries just the way you like them!

1. Insert the frozen items into the bread slot.
2. Set the Shade Control to the level you want.

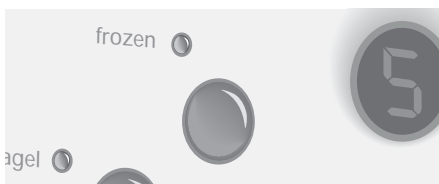

3. Press the Frozen Button, then push the Easy Lift™ lever down until it locks. You can also press the Frozen Button *after* pushing down the Easy Lift™ lever.

To thaw and toast frozen bagels: press both the Bagel and Frozen Buttons.

## To Warm Toasted Items

The Warm function will warm toast and other items quickly without additional browning.



1. Insert the previously toasted item in bread slot. Do not place bread with butter or any other topping in the toaster! Use Warm for dry bread and bagels only.

2. No Shade adjustment is necessary – the Warm function overrides whatever Shade level you have set.

 


3. Press the Warm Button, then push the Easy Lift™ lever down until it locks. You can also press the Warm Button *after* pushing down the Easy Lift™ lever.

The Warm function cannot be used in combination with the Baker's Bagel™ or Frozen functions.

# Toaster Features Model KTT340

---

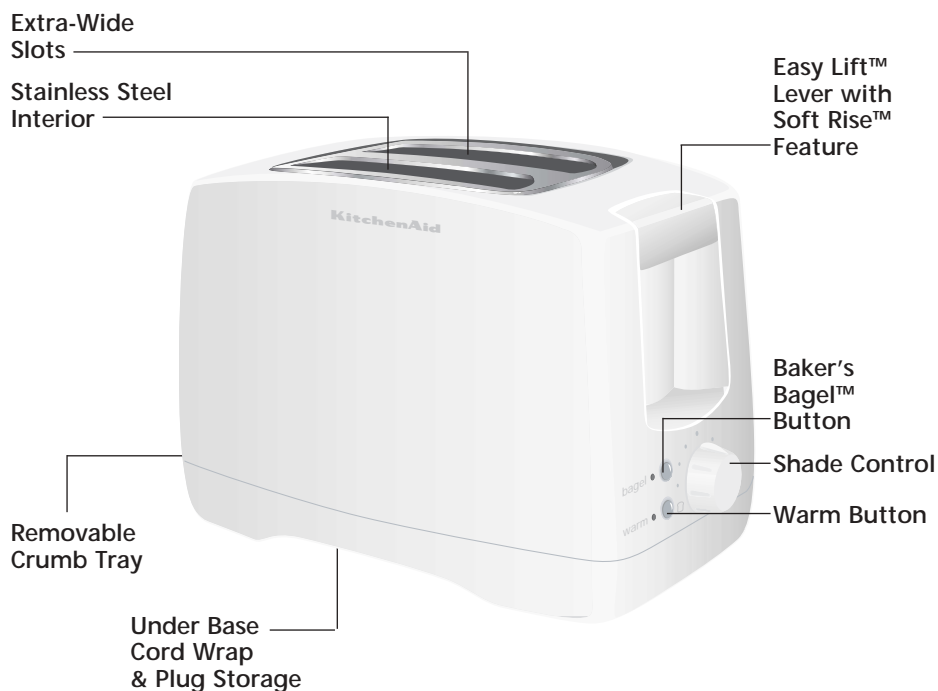

# Toaster Features Model KTT340

---

## **Even Heat™ System**

Heavy gauge heating elements mounted on extra-thick mica boards ensure even browning. A heat sensor automatically adjusts toasting time to ensure consistent toasting slice after slice.

## **Easy Lift™ Lever**

Cancel toasting with just a touch of the lever.

## **Soft Rise™ Feature**

Lifts fragile breads and toaster pastries gently.

## **Extra-Wide Slots**

Handles bagels, English muffins, and thick breads easily.

## **Self-Centering Bread Racks**

Centers thick or thin breads perfectly for even toasting.

## **Removable Crumb Tray**

Full-width, rugged stainless-steel tray is dishwasher-safe.

## **Under Base Cord Wrap & Plug Storage**

Keeps extra cord out of sight and out of the way.

## **Shade Control**

Turn the rotary shade control clockwise for darker toast, counterclockwise for lighter.

## **Polycarbonate Housing**

Is durable and remains cool to the touch. The smooth, rounded surfaces are easy to clean.

## **Stainless Steel Interior**

The ultimate in durability. Extra-deep toasting cavity helps ensure even browning.

## **SPECIAL TOASTING FUNCTIONS**

### **Baker's Bagel™ Button**

Exclusive process varies the power level to each side of a bagel or English muffin, for perfect results!

### **Warm Button**

Warms – but doesn't darken – previously toasted foods.

### **Function Lights**

Indicate what special functions are selected.

# Using Your KitchenAid® Toaster

## MODEL KTT340

Before using your toaster, check the Extra-Wide Slots and remove any packing or printed material that may have fallen inside during shipping or handling. Do not probe inside the toaster with a metal object.

You may see light smoke the first time you use the toaster. This is normal. The smoke is harmless and will soon disappear.

### TO USE:



1. Shorten cord, if necessary, by wrapping cord under the base.
2. Plug toaster cord into electrical outlet.
3. Insert bread or other food to be toasted in slot.



 
4. Turn the Shade Control to select the degree of darkness you want. Turn the Shade Control clockwise for darker toast, counterclockwise for lighter.

Note: Different types of bread and their moisture levels may require different shade settings. For example, dry bread will brown more rapidly than moist bread and will require a lighter setting.

For even toasting, toast only one bread type and thickness at a time.



5. Push the Easy Lift™ lever down until it locks in place. The centering racks will adjust slot width automatically to hold food upright for even toasting. When toasting is completed, the toaster will shut off and the Soft Rise™ system will gently raise the toast.

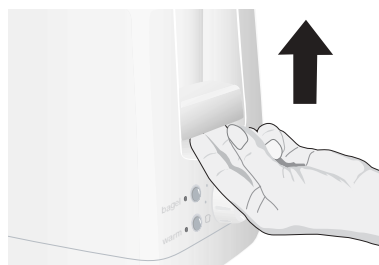

To cancel toasting anytime, lift gently on the Easy Lift™ lever. The toaster will shut off and the Soft Rise™ system will gently raise the toast.




# Special Toasting Functions

 
After you lower the Easy Lift™ lever to begin toasting, you can select the special toasting functions by pressing the appropriate button. The function lights will indicate which function is selected. After a toasting cycle is complete, all functions will be cleared.

## Baker's Bagel™ Toasting

Selecting the Bagel Button will toast the thickest bagels and English muffins evenly, gently browning the bottoms while toasting the sides that are sliced. An exclusive KitchenAid™ process, Baker's Bagel™ Toasting produces perfect results by reducing power to the heating elements on one side of the toasting cavity by 50%.

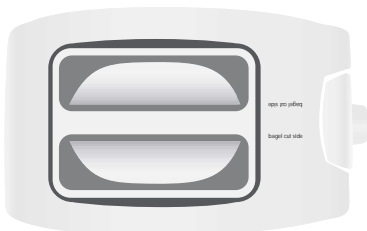

 1. Insert the bagel so that the flat (sliced) side of the bagel faces the center of the toaster.
2. Set the Shade Control to the level you want. English muffins will generally take more time to toast than bagels.
3. Push the Easy Lift™ lever down until it locks.

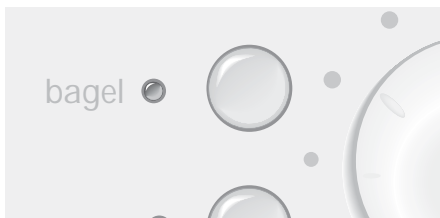

4. Press the Bagel Button. The Baker's Bagel™ function, once selected, cannot be cancelled except by cancelling the toasting cycle. Do

this by lifting gently on the Easy Lift™ lever. The toaster will shut off and the Soft Rise™ system will gently raise the bagel.

## To Warm Toasted Items

The Warm function will warm toast and other items quickly without additional browning.

1. Insert the previously toasted item in bread slot. Do not place bread with butter or any other topping in the toaster! Use Warm for dry bread and bagels only.
2. No Shade adjustment is necessary – the Warm function overrides whatever Shade level you have set.
3. Push the Easy Lift™ lever down until it locks.



 
4. Press the Warm Button. The Warm function, once selected, cannot be cancelled except by cancelling the toasting cycle. Do this by lifting gently on the Easy Lift™ lever. The toaster will shut off and the Soft Rise™ system will gently raise the toast.

The Warm function cannot be used in combination with the Baker's Bagel™ function.

# Cleaning Your Toaster

---

1. Unplug the toaster and let it cool before cleaning.

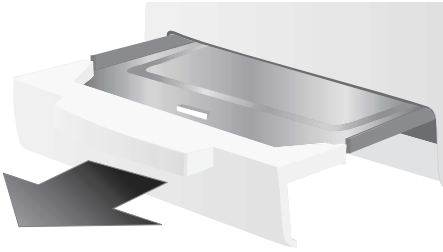

2. Slide out the crumb tray and shake the crumbs into a waste container. It is recommended that the crumb tray be emptied after each use. The crumb tray is dishwasher safe. Remember: the tray will be hot immediately following a toasting cycle.

3. Wipe toaster with a soft, damp cotton cloth. Do not use paper towels, abrasive cleansers or liquid cleaning products. Do not immerse toaster in water.

Note: If grease or oil splatters on the toaster, wipe splatters away immediately using a clean, damp cotton cloth.

4. Return crumb tray to toaster. Press it in firmly until it clicks into position. Do not use the toaster without the crumb tray in proper position.

Note: KitchenAid does not recommend the use of a toaster cover.

# Flavored Butters

---

Ready to try something new? Make your toast uniquely delicious with these flavored butters you can prepare at home! Serve on warm toast. Do not place bread with butter or any other topping in the toaster.

## Honey-Orange Butter

- ½ cup very soft butter, margarine, or reduced-calorie margarine*
- 2 tablespoons orange juice concentrate, thawed*
- 1 tablespoon honey*
- ½ teaspoon cinnamon*

Add all ingredients to food processor. Process until thoroughly mixed, about 30 seconds.

Yield: ½ cup (16 ½-tablespoon servings).

Per serving: About 56 cal, 0 g pro, 1 g car, 6 g fat, 16 mg chol, 38 mg sod.

## Lemon-Thyme Butter

- ½ cup very soft butter, margarine, or reduced-calorie margarine*
- 1 tablespoon fresh thyme leaves (stripped from stem)*
- 4 teaspoons lemon juice*

Add all ingredients to food processor. Process until thoroughly mixed, about 30 seconds.

Yield: ½ cup (16 ½-tablespoon servings).

Per serving: About 51 cal, 0 g pro, 0 g car, 6 g fat, 16 mg chol, 39 mg sod.

## Cheesy Garlic Butter

- 1 clove garlic*
- ½ cup very soft butter, margarine, or reduced-calorie margarine*
- ¼ cup freshly grated Parmesan cheese*

With food processor running, add garlic through feed tube. Process until coarsely chopped, about 5 seconds. Add remaining ingredients. Process until well mixed, about 30 seconds.

Yield: ½ cup (16 ½-tablespoon servings).

Per serving: About 58 cal, 1 g pro, 0 g car, 6 g fat, 17 mg chol, 67 mg sod.



FOR THE WAY IT'S MADE.™

® Registered Trademark/™Trademark of KitchenAid, U.S.A.